

CARRERA

DESIGNED IN GERMANY

CARRERA

DESIGNED IN GERMANY

EN
WATER
FLOSSER

Instruction manual

RU
ПОРТАТИВНЫЙ
ИРРИГАТОР
ДЛЯ ПОЛОСТИ РТА

Инструкция по эксплуатации



№107

Welcome to the **CARRERA** club!

The story of **CARRERA** starts in the 80' in Germany as a lifestyle across two product categories: personal care and home appliances.

CARRERA engineers and designers were inspired by the legendary Carrera Panamericana, the longest and the most challenging race in the 50'. Only the racers who were ready to go beyond the limitations of their own bodies and materials stood a chance of winning.

Today, that same philosophy drives **CARRERA** to develop unique and powerful products.

Each product is made of hi-tech components and quality materials outlining power, quality, innovative features and effective design.

This approach resonated with millions of people, boosting **CARRERA** brand recognition in Europe up to 90 %. **CARRERA** products have become an embodiment of German precision and craftsmanship.

Today, **CARRERA** continues to invest into research and development. Each **CARRERA** product provides users with a sense of luxury, comfort and efficacy.

CARRERA is not just about tools. It is about a lifestyle.

CONTENTS

01 SAFETY PRECAUTIONS	3
02 INTENDED USE	4
03 APPLIANCE OVERVIEW	5
04 BEFORE USE	6
05 OPERATION	8
06 CLEANING & MAINTENANCE	10
07 TROUBLESHOOTING	11
08 DISPOSAL	12
09 TRANSPORT AND STORAGE	12
10 TECHNICAL SPECIFICATIONS	12
11 SCOPE OF DELIVERY	13
12 WARRANTY	13
13 ADDITIONAL INFORMATION	13

01 SAFETY PRECAUTIONS

Read this instruction manual carefully before using the appliance. Keep this instruction manual, the packing box and, if possible, other elements of the appliance's packaging. The manufacturer shall not be liable for any damage or malfunction of the appliance or for any damage resulting from incorrect or improper use of the appliance.


- Check the appliance and USB cable regularly for damage. Do not use the product if any damage is detected.
- Do not use the product for other than its intended use.
- Do not use the product outdoors.
- Do not immerse the product or USB cable in water or other liquids.
- Do not expose the instrument or USB cable to high temperatures, direct sunlight, dampness, or other adverse conditions.
- If you have recently undergone oral surgery or are undergoing oral treatment, it is not recommended to use the appliance without prior consultation with a doctor.
- If your gums start bleeding during use, you should stop using the product until you consult your doctor.
- Remove jewelry (rhinestones, grills, etc.) from the teeth before using the appliance.
- Always turn the appliance off before changing the nozzle or filling the water tank.
- Do not turn the appliance on when the water tank is empty. Do not fill the water tank with hot water.
- Do not leave the appliance running unattended, turn it off immediately after use.
- Be sure to pour out any remaining water after use. Clean the appliance after each use.
- Do not direct the water stream into the eyes, under the tongue, into the ear, nose or other sensitive areas.
- Do not use accessories that are not included in the scope of delivery.
- Do not subject the appliance to mechanical impact. Do not apply excessive pressure to the nozzle. Do not use deformed or mechanically damaged nozzles.
- Do not allow children to play with the appliance, the USB cable or the packaging.

- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not attempt to repair the appliance or replace any parts yourself. In case of malfunctions, contact the nearest service center.

02 INTENDED USE

The portable water flosser is designed for oral care and cleaning of the interdental space. The appliance is intended for use in commercial or domestic areas in accordance with the intended use and the safety precautions described in these operating instructions.


03 APPLIANCE OVERVIEW

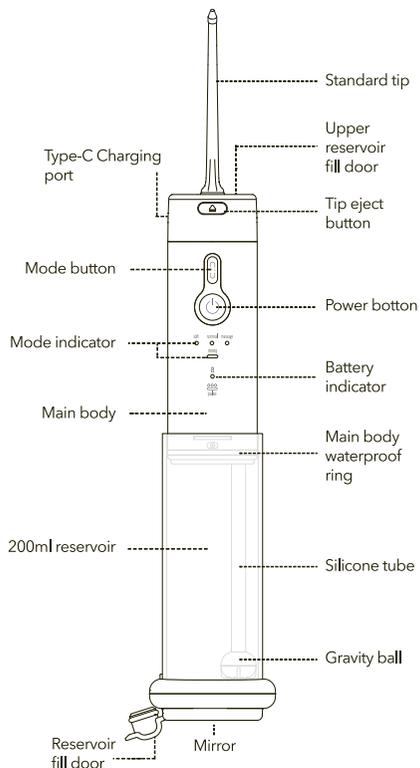

04 BEFORE USE

Charging the appliance

- Charge the water flosser for 3 hours before using it for the first time. This charging is necessary every time the water flosser has not been used for a long time.
- For charging remove the silicone plug on the body and connect the water flosser to the power supply via USB cable.
- During use, charge level is determined by the color of the battery indicator on the display: if the charge level is below 10 %, the indicator will blink red. If the charge level is above 10 %, the indicator light will be green.
- During charging, the battery indicator will flash red until the battery level reaches 100 %. The indicator light will be green if fully charged. One full battery charge is enough for 100 days of daily use.
- It is not possible to use the water flosser while it is charging.

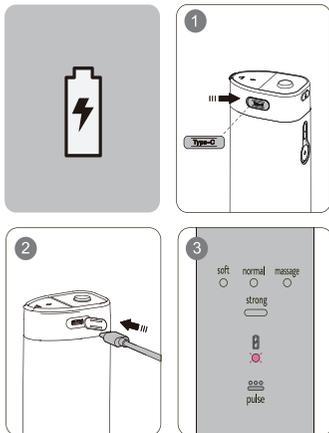


WARNING!

- To maximize battery life, do not leave the battery discharged for long periods of time.
- Do not touch the USB cable with wet hands!
- If the appliance or USB cable become very hot during charging, unplug the appliance immediately and contact an authorized service center.

Filling the water tank

- Before first use, rinse the water tank under running water and drain the remaining water.
- Fill the tank with clean water. This can be done in two ways: through the lid in the appliance body or through the lower opening in the tank.
- Close the cover of the opening until it clicks into place.

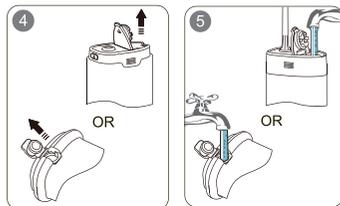


Choosing and installing the nozzle

- The set includes 3 interchangeable nozzles:






- 1 Standard nozzle for daily oral care.
- 2 Periodontal nozzle for inflamed gums (suitable for periodontitis, periodontal disease and other gum diseases).
- 3 Orthodontic nozzle for cleaning braces as well as bridges, implants and hard-to-reach areas of the mouth.

- Insert the nozzle into the special hole in the top of the housing until it clicks into place. Make sure it is securely locked in place.
- To remove the nozzle, press the special button on the body of the appliance.

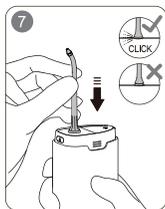


05 OPERATION

- Before using the water flosser, brush your teeth thoroughly with a toothbrush.
- Place the nozzle tip into your mouth at a 45° angle and press the mode button to select one of the five modes . Press the button. Holding the nozzle at 90° angle, direct the jet horizontally into the area between the teeth along the edge of the gum. Move the nozzle from the back teeth to the front teeth. Do not press the nozzle too hard against the teeth or gums.
- The water flosser will run for 2 minutes and then turn off automatically. To turn the water flosser off sooner, press the button .
- Drain any remaining water from the tank.

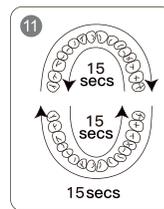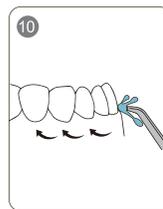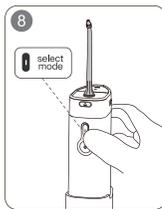

Operating modes

- **Soft:** for gentle care with low water pressure: recommended for sensitive gums and in the first few days of irrigator use, until the gums are used to the water pressure. The indicator light "soft" on the panel will light up.
- **Normal:** for gentle daily oral care: recommended for sensitive gums and when the gums have become accustomed to the water pressure in SOFT mode. The indicator light "normal" on the panel will light up.
- **Massage:** for daily use and cleansing of the mouth and the space between the teeth, recommended to improve blood circulation in the gums. The indicator light "massage" on the panel will light up.
- **Strong:** for fast cleaning with high water pressure. The indicator light on the panel will light up.
- **Pulse:** for spot cleaning, a strong jet of water will be delivered every two seconds. All indicators on the panel will light up.


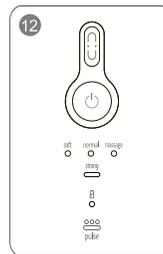


Recommendations for use

- Use the water flosser over the sink, as splashes may fly from the water flosser.
- At the beginning of use, it is recommended to use the water flosser once a day or every other day.
- Water flosser is not a substitute for brushing teeth with toothpaste and flossing. It is only effective when used together with these procedures.
- Too frequent use of an irrigator can thin tooth enamel and increase tooth sensitivity.
- To prevent scale on the inner surface of the tank, it is recommended to rinse it thoroughly after each use.

06 CLEANING & MAINTENANCE

- Wipe the body of the appliance with clean wet cloth.
- Wash the nozzles under cool tap water with gentle soap after each use. Nozzles can be stored in the water flosser housing. It is recommended to change the nozzles every three months.
- Rinse the tank under tap water. If necessary, clean the residue with a small brush.
- During storage, it is recommended to keep the water tank's lid open to avoid unpleasant smells.
- If you plan not to use the appliance for a long time, remove the nozzle and the tank. Fully charge the appliance.
- Keep the appliance in a dry, cool place out of children's reach.

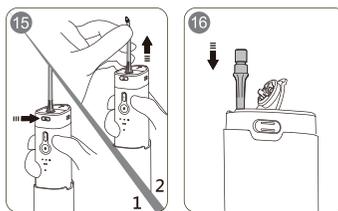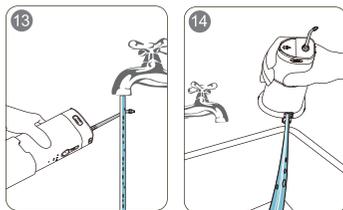

WARNING!

- Do not use abrasive cleaning agents.
- Do not immerse the appliance in water!

07 TROUBLESHOOTING

Problem	Possible cause	Solution
Water flosser does not turn on.	The water flosser is completely discharged.	Charge the water flosser according to these the instruction manual.
Low water pressure.	Low battery level.	Fully charge the water flosser.
	The nozzle is clogged.	Replace the nozzle.
Water is dripping from the tank.	The plug of the water inlet is not closed.	Close the cover tightly.
	The sealing ring of the water inlet cover is damaged.	Contact an authorized service center.
When plugged in, the water flosser does not charge.	The USB cable is damaged.	Contact an authorized service center.
The battery charge runs out too quickly after being fully charged.	The water flosser is used at too low an ambient temperature.	Use and charge the water flosser at temperatures between 15 and 35 °C.

WARNING!

- Never repair the appliance yourself. Always contact an authorized service center.

08 DISPOSAL



To protect the environment, do not dispose of appliance and the batteries with household waste. Bring the appliance and batteries to specialized points for further disposal. For more information on the disposal of this product, contact your local authority, your household waste disposal service, or the retailer.

09 TRANSPORT AND STORAGE

- Store the appliance in a clean, closed, dry room at an ambient temperature between 5 and 40 °C and a relative humidity of no more than 70 %.
- Transportation of the device can be carried out by all means of transport, in accordance with the rules for the carriage of goods. When transporting in the original packaging, protect the appliance from damage, preventing the exposure to precipitation and aggressive environments.
- When transporting the appliance without original packaging, use bubble wrap and corrugated cardboard packaging. Wrap each element of the appliance in a film and place it vertically in the container. The free distance between the elements of the product must be laid with air bubble wrap or folded cardboard.

10 TECHNICAL SPECIFICATIONS

- Model: CRP107
- Input: 5 V = 1 A
- Battery: Li-ion, 2500 mA·h, 3,7 V
- Water pressure: 40-130 PSI
- Pulsation frequency: 700-2000 pulses per minute
- Water tank: 200 ml
- Charging time: 3 h
- Protection rating: IPX7
- Product dimensions: 297,5 x 73,5 x 53,5 mm
- Net weight: 250 g

11 SCOPE OF DELIVERY

- Water flosser
- Nozzles - 3 pcs
- USB cable
- Pouch
- Instruction manual

12 WARRANTY

Organization for warranty service and acceptance of claims: LLC "MVM", Russia, 105066, Moscow, Nizhnaya Krasnoselskaya str., 40/12, building 20, floor 5, room II, room 3.

Phone: +7 (495) 644-28-48

Information about the warranty conditions:

<https://www.eldorado.ru/spv>

or by phone Eldorado - 8 (800) 250 25 25

<https://www.mvideo.ru/spv>

or by phone M.Video - 8 (800) 600 77 75

The seller's warranty is 12 months from the date of sale (transfer) of the goods to the Customer.

13 ADDITIONAL INFORMATION

Manufacturer: Guangdong Energetic Home Appliance Co., Ltd

Address: No.20 Changjiang Road, Sanshan New Town, Guicheng, Nanhai District, Foshan City, Guangdong, China

Made in China

Importer/Manufacturer's authorized company:

LLC "MVM", Russia, 105066, Moscow, Nizhnaya Krasnoselskaya str., 40/12, building 20, floor 5, room II, room 3.

E-mail: cert-log@mvideo.ru

Phone: +7 (495) 644-28-48

Installed by the manufacturer in accordance with paragraph 2 of article 5 of the Law of the Russian Federation "On Consumer Protection" the service life of this product is 3 years from the date of sale, provided that the product is used in accordance with the rules and recommendations set forth in this instruction manual and applicable technical standard.

There are no special conditions for the sale.

The date of manufacture is indicated on the appliance where MM is the month of manufacture and YYYY is the year of manufacture.

The product is certified, meets the requirements: TR TS 020/2011 «Electromagnetic compatibility of technical means»

TR EAEU 037/2016 «On the restriction of the use of hazardous substances in products of electrical engineering and radio electronics» .

Добро пожаловать в клуб **CARRERA!**

История бренда начинается в 1980-е гг. в Германии, когда дизайнеры разработали первые линейки техники для дома и для ухода за собой.

Инженеры и дизайнеры **CARRERA** вдохновлялись легендарной Carrera Panamericana - самой долгой и опасной гонкой 1950-х. На победу в гонке могли рассчитывать лишь те, кто выкладывался до конца и был готов выйти за пределы возможностей человека и техники.

Эта философия и легла в основу всех продуктов **CARRERA**.

Для каждого устройства используются Hi-Tech компоненты и высококачественные материалы. Акцент делается на мощность, качество, инновационность и функциональный дизайн.

Такой подход нашел отклик в сердцах миллионов покупателей: в настоящий момент узнаваемость бренда в Европе достигла 90 %, а продукты **CARRERA** стали признанным воплощением немецкой точности и мастерства.

Сегодня **CARRERA** продолжает инвестировать в научные исследования и развитие. В каждом созданном продукте сочетается комфорт, производительность и роскошь.

CARRERA – это не просто техника. Это стиль жизни.

СОДЕРЖАНИЕ

01 МЕРЫ БЕЗОПАСНОСТИ	17
02 НАЗНАЧЕНИЕ	18
03 СХЕМА ПРИБОРА	19
04 ПОДГОТОВКА К ЭКСПЛУАТАЦИИ	20
05 ЭКСПЛУАТАЦИЯ	22
06 ОЧИСТКА И УХОД	24
07 УСТРАНЕНИЕ НЕИСПРАВНОСТЕЙ	25
08 УТИЛИЗАЦИЯ	26
09 ТРАНСПОРТИРОВКА И ХРАНЕНИЕ	26
10 ТЕХНИЧЕСКИЕ ХАРАКТЕРИСТИКИ	27
11 КОМПЛЕКТАЦИЯ	27
12 ГАРАНТИЯ	27
13 ДОПОЛНИТЕЛЬНАЯ ИНФОРМАЦИЯ	28

01 МЕРЫ БЕЗОПАСНОСТИ

Перед использованием прибора внимательно ознакомьтесь с настоящей инструкцией по эксплуатации. Сохраняйте настоящую инструкцию по эксплуатации, упаковочную коробку и по возможности другие элементы упаковки прибора. Производитель не несет ответственности за выход прибора из строя или за ущерб, возникший в результате неправильного или непредусмотренного настоящей инструкцией использования прибора.


- Регулярно проверяйте прибор и кабель USB для выявления повреждений. Не используйте прибор в случае обнаружения каких-либо повреждений.
- Не используйте прибор не по назначению.
- Не используйте прибор вне помещений.
- Не погружайте прибор, кабель USB в воду или другие жидкости.
- Берегите прибор и кабель USB от воздействия высоких температур, прямых солнечных лучей, сырости и прочих негативных воздействий.
- В случае если вы недавно перенесли хирургическое вмешательство в ротовой полости, либо проходите курс лечения ротовой полости, не рекомендуется использование прибора без предварительной консультации с врачом.
- Если во время использования десны начали кровоточить, необходимо прекратить использование прибора до консультации с врачом.
- Перед использованием прибора снимите с зубов украшения (стразы, гризлы и т. д.).
- Перед сменой насадки или заливом воды в резервуар обязательно выключайте прибор.
- Не включайте прибор, если резервуар для воды пуст. Не заливайте в резервуар горячую воду.
- Не оставляйте работающий прибор без присмотра – выключайте его сразу после использования.
- Обязательно выливайте всю оставшуюся воду после использования прибора. Очищайте прибор после каждого использования.
- Не направляйте поток воды в глаза, под язык, в ухо, нос или другие чувствительные области.
- Не используйте принадлежности, не входящие в комплект.

- Не подвергайте прибор механическому воздействию. Не надавливайте на насадку слишком сильно. Запрещается использовать деформировавшиеся насадки или насадки с механическими повреждениями.
- Не позволяйте детям играть с прибором, USB-кабелем или элементами упаковки.
- Прибор не предназначен для использования лицами (включая детей) с пониженными физическими, сенсорными или умственными способностями или при отсутствии у них жизненного опыта или знаний, если они не находятся под присмотром или не проинструктированы об использовании прибора лицом, ответственным за их безопасность.
- Не пытайтесь самостоятельно ремонтировать прибор или заменять какие-либо детали. При обнаружении неполадок обращайтесь в ближайший сервисный центр.

02 НАЗНАЧЕНИЕ

Портативный ирригатор предназначен для ухода за полостью рта и очищения межзубного пространства. Прибор предназначен для работы в коммерческих или домашних зонах в соответствии с назначением и мерами безопасности, описанными в данной инструкции по эксплуатации.


03 СХЕМА ПРИБОРА

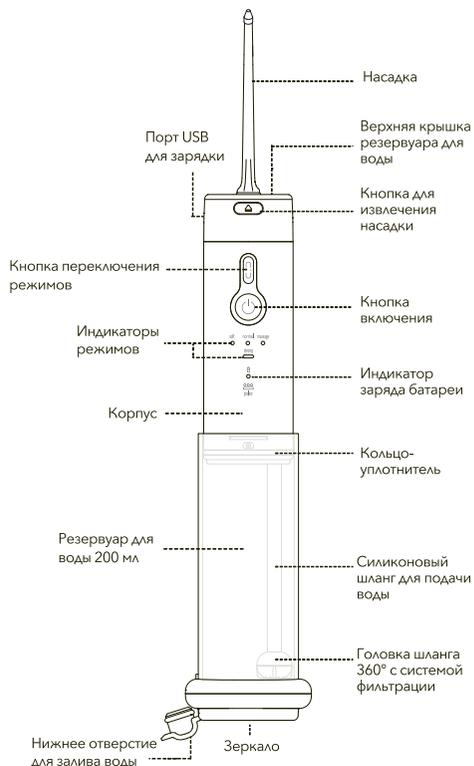

04 ПОДГОТОВКА К ЭКСПЛУАТАЦИИ

Зарядка

- Перед первым использованием зарядите ирригатор в течение 3-х часов. Такая зарядка необходима каждый раз, если ирригатор не использовался длительное время.
- Для зарядки вытащите силиконовую заглушку на корпусе и подключите ирригатор к источнику питания через USB-кабель.
- Определить уровень заряда во время использования можно по цвету индикатора батареи на дисплее: при уровне заряда ниже 10 % индикатор будет мигать красным. При уровне заряда выше 10 % индикатор будет гореть зеленым светом.
- Во время зарядки индикатор батареи будет мигать красным, пока уровень заряда не поднимется до 100 %. Затем индикатор загорится зеленым. Одного полного заряда батареи достаточно на 100 дней ежедневного использования.
- Использование ирригатора во время зарядки невозможно.

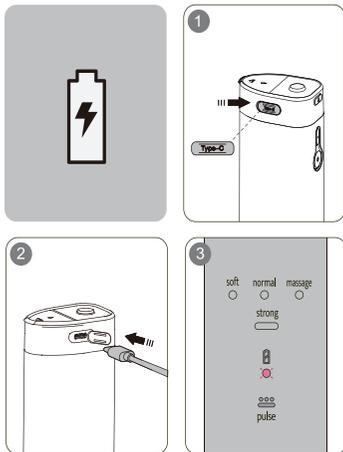


ВНИМАНИЕ!

- Для увеличения срока службы аккумулятора не оставляйте его в разряженном состоянии на длительное время.
- Не трогайте кабель USB мокрыми руками!
- Если во время зарядки прибор, USB кабель сильно нагреются, немедленно отключите прибор от источника питания и обратитесь в авторизованный сервисный центр.


Залив воды

- Перед первым использованием промойте резервуар под струей воды и слейте оставшуюся воду.
- Залейте чистую воду. Это можно сделать двумя способами: через крышку в корпусе прибора или через нижнее отверстие в резервуаре.
- Закройте крышку отверстия для залива воды до щелчка.

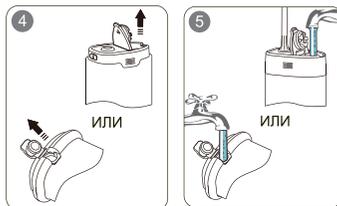


Выбор и установка насадки

- В комплект входят 3 сменные насадки:



1. Стандартная насадка для ежедневного ухода за полостью рта.
2. Пародонтологическая насадка для ухода за воспаленными деснами (подходит для использования при пародонтите, пародонтозе и других заболеваниях десен).
3. Ортодонтическая насадка для очищения брекетов, а также мостов, имплантов и труднодоступных участков полости рта.

- Вставьте насадку в специальное отверстие в верхней части корпуса до щелчка. Убедитесь, что она надежно зафиксирована.
- Чтобы извлечь насадку, нажмите на специальную кнопку на корпусе прибора.

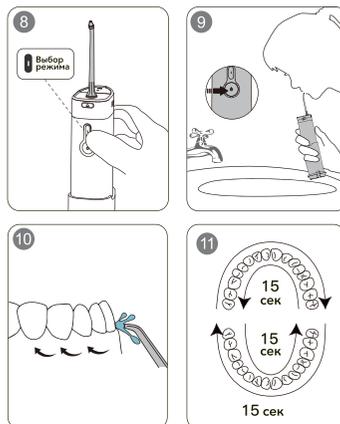

05 ЭКСПЛУАТАЦИЯ

- Перед использованием ирригатора тщательно почистите зубы зубной щеткой.
- Поместите наконечник насадки в полость рта под углом 45° и, нажимая кнопку выбора режима, выберите один из пяти доступных режимов. Нажмите кнопку . Удерживая насадку строго под углом 90°, направляйте струю горизонтально в область между зубами вдоль края десны. Передвигайте насадку от задних зубов к передним. Не прижимайте насадку к зубам или деснам слишком сильно.
- Ирригатор будет работать в течение 2 минут, затем автоматически выключится. Чтобы выключить ирригатор раньше, нажмите кнопку .
- Слейте из резервуара остатки воды.

Режимы использования

- **Soft (бережный):** режим для бережного ухода со слабым напором воды: рекомендуется при чувствительных деснах и в первые дни использования ирригатора, пока десны не привыкли к давлению воды. На панели будет гореть индикатор "soft".
- **Normal (стандартный):** режим для бережного ежедневного ухода: рекомендуется при чувствительных деснах и после привыкания десен к давлению воды в режиме SOFT. На панели будет гореть индикатор "normal".
- **Massage (массирующий):** режим для ежедневного использования и очищения полости рта и пространства между зубами, рекомендуется для улучшения кровообращения в деснах. На панели будет гореть индикатор "massage".
- **Strong (интенсивный):** режим для быстрой очистки зубов с высоким уровнем давления воды. На панели будет гореть индикатор .
- **Pulse (пульсирующий):** режим для точечного удаления загрязнений, сильная струя воды будет подаваться каждые две секунды. На панели будут гореть все индикаторы.







Советы по применению

- Используйте ирригатор над раковиной, так как от него могут лететь брызги.
- В начале использования рекомендуется использовать ирригатор один раз в день или через день.
- Ирригатор не заменит чистку зубов щеткой и пастой, а также зубную нить. Его применение эффективно только в комплексе с этими процедурами.
- Слишком частое использование ирригатора может привести к истончению зубной эмали и увеличению чувствительности зубов.
- Для предотвращения налета на внутренней поверхности резервуара рекомендуется тщательно промывать его после каждого использования.

06 ОЧИСТКА И УХОД

- Протрите корпус прибора чистой влажной тканью.
- Промойте насадки под струей прохладной воды с мылом – это необходимо делать после каждого использования. Насадки можно хранить в корпусе ирригатора. Рекомендуется менять насадки каждые три месяца.
- Прополощите резервуар под проточной водой. При необходимости очистите осадок или накипь в резервуаре щеточкой.
- Во время хранения крышку резервуара для воды рекомендуется держать в открытом состоянии, чтобы не образовался неприятный запах застоявшейся воды.
- В случае если вы планируете долго не использовать прибор, необходимо снять насадку и отсоединить резервуар. Полностью зарядите прибор.

- Храните прибор в сухом, прохладном месте, недоступном для детей.

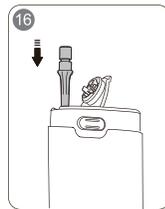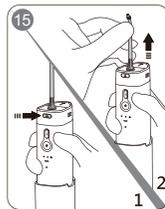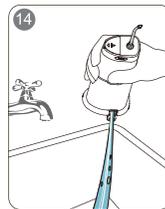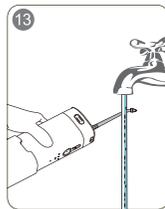

ВНИМАНИЕ!

- Не используйте абразивные чистящие средства.
- Не погружайте прибор в воду!

07 УСТРАНЕНИЕ НЕИСПРАВНОСТЕЙ

Неисправность	Причина	Устранение неисправности
Ирригатор не включается.	Ирригатор полностью разряжен.	Зарядите ирригатор в соответствии с данной инструкцией по эксплуатации.
Слабый напор воды.	Низкий заряд батареи.	Полностью зарядите ирригатор.
	Насадка засорилась.	Замените насадку.
Из резервуара льется вода.	Крышка отверстия для заливки воды не закрыта.	Плотно закройте крышку.
	Уплотнительное кольцо крышки отверстия для заливки воды повреждено.	Обратитесь в авторизованный сервисный центр.
При включении в электросеть прибор не заряжается.	Поврежден кабель USB.	Обратитесь в авторизованный сервисный центр.
Заряд батареи слишком быстро заканчивается после полной.	Прибор используется при слишком низкой температуре окружающей среды.	Используйте и заряжайте прибор при температуре от 15 до 35 °C.

ВНИМАНИЕ!

Никогда не ремонтируйте прибор самостоятельно. Всегда обращайтесь в авторизованный сервисный центр или специализированную мастерскую.

08 УТИЛИЗАЦИЯ



В целях защиты окружающей среды после окончания срока службы прибора выбрасывайте его вместе с обычными бытовыми отходами. Передайте прибор в специализированные пункты для дальнейшей утилизации.

Для получения дополнительной информации об утилизации данного продукта обратитесь в местную службу утилизации бытовых отходов или в магазин, где вы приобрели данный продукт.

09 ТРАНСПОРТИРОВКА И ХРАНЕНИЕ

- Храните прибор в чистом закрытом сухом помещении при температуре окружающей среды в диапазоне от 5 до 40 °C и относительной влажности воздуха не выше 70 %.
- Транспортировка прибора проводится всеми видами транспорта в соответствии с правилами перевозки грузов. При транспортировке в заводской упаковке обеспечьте защиту прибора от повреждений, исключив возможность воздействия атмосферных осадков и агрессивной среды.
- При транспортировке без заводской упаковки рекомендуется использовать воздушно-пузырьковую пленку и тару из гофрированного картона. Рекомендуется качественно обернуть каждый элемент прибора в пленку и расположить в таре вертикально. Свободное расстояние между элементами изделия необходимо проложить воздушно-пузырьковой пленкой или сложенным картоном.

10 ТЕХНИЧЕСКИЕ ХАРАКТЕРИСТИКИ

- Модель: CRP107
- Вход: 5 В = 1 А
- Аккумулятор: Li-ion, 2500 мА·ч, 3,7 В
- Давление: 275-900 кПа
- Количество пульсаций: 700-2000 импульсов/мин
- Емкость резервуара для воды: 200 мл
- Время зарядки: 3 ч
- Количество режимов: 5
- Степень защиты: IPX7
- Размер (В x Г x Ш): 297,5 x 73,5 x 53,5 мм
- Вес: 250 г

11 КОМПЛЕКТАЦИЯ

- Портативный ирригатор для полости рта
- Насадка – 3 шт
- USB-кабель
- Чехол для хранения
- Инструкция по эксплуатации

12 ГАРАНТИЯ

Организация по гарантийному обслуживанию и принятию претензий: ООО «МВМ», Россия, 105066, г. Москва, ул. Нижняя Красносельская, д. 40/12, корпус 20, этаж 5, помещение II, комната 3.

Информация об условиях гарантии:
<https://www.eldorado.ru/spv>
или по телефону Эльдорадо – 8 (800) 250-25-25
<https://www.mvideo.ru/spv>
или по телефону М.Видео – 8 (800) 600-77-75

Гарантия продавца – 12 месяцев с момента продажи (передачи) товара Покупателю.

